



PARROT

Belt Pack Transmitter

WWW.OVER-EAR.COM

What's in the box

Receiver, power cable and 3.5mm jack



Transmitter



3.5mm jack cable

Make the most of your Parrot...

Parrot can be used with a wide range of OVER-EAR products, including headphones and other transmitters.

Compatible with:



Harry



Bob



Joe



Donkey



Falcon X



Parakeet

OVER-EAR

WWW.OVER-EAR.COM

Parrot setup...



1

INSERT BATTERIES
Open the front of the transmitter and insert 2 x AA batteries.



2

SWITCH ON
Press and hold on/ off until the LED power light turns on and the display shows.



3

PLAY AUDIO
Plug your device into the Connect audio device (i.e. headphones) to audio input.




4

SELECT CHANNEL
Press the mode button until the display flashes use the directional buttons to change channel.



MEET PARROT

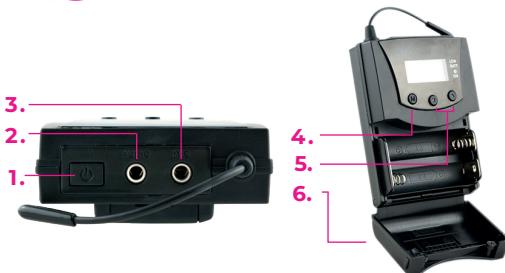

1. Power button

Press and hold for on/ off (1 sec). turn the transmitter on.

2. Auxiliary input

Connect your device by using a 3.5mm jack.

3. Mic input

Connect your microphone via a 3.5mm jack.

4. Mode button

Press and hold the mode button until the frequencies on the display start flashing. Once flashing, you can use the channel buttons to change the channel.

5. Channel buttons

Use the [^] Channel up and [v] Channel down to cycle through the channels.

6. Battery Cover

Flip open the battery cover to replace the batteries within the transmitter.



TECHNICAL SPECIFICATION

Model Number:	OE1700P
Dimensions:	8.2cm x 6.1cm x 2.7cm
Weight:	0.15g
Sound:	Stereo
Frequency Response:	30- 15,000Hz
Channel Separation:	>40dB
Modulation:	UHF
S/N Ratio:	>80db
Audio Input Voltage:	500mVrms @ 1khz
Connections:	3.5mm audio; 3.5mm mic
Power Source:	2 x AA Batteries
Charge Voltage:	5v
Charge Current:	200mA
Charge Time:	N/A
Battery Life:	<24 hours
RF Power:	10dBm
Modulation Frequency Offset:	50KHz/ 600mVrms
Op Distance:	100m
Working Current:	90mA±10mA
Frequencies:	Custom i.e. 433MHz/ 863MHz/ 915MHz etc.
LED Colour Typical Frequency	
UK, EU & ROW	
A	863.1MHz
B	863.7MHz
C	864.9MHz
D	864.3MHz
USA	
A	914MHz
B	915MHz
C	916MHz
D	917MHz

Please note frequencies and other specifications may be changed without notice.
If in doubt please confirm with supplier.



SAFETY INSTRUCTIONS

- Switch off and disconnect equipment before cleaning.
- Do not repair or replace parts for any products.
- Do not use equipment if damaged by water, heat, physical impact etc.
- Do not use or store equipment in or near water, moist or hot environments.
- Do not try using the USB-C port to charge using non-rechargeable batteries.
- Keep away from radiators and heat generating electrical equipment such as screens and amps.
- Use only the supplied power cable and accessories with your product.
- Disconnect from power after charging and especially when not being used for long periods of time.
- Ensure that power connection is plugged in properly - not damaged, working within a comfortable temperature and not exposed to direct sunlight.
- Do not overload wall sockets.
- Failure to comply with safety guidelines can result in electrical shock, fire, damage to equipment and invalidate your warranty.
- If in doubt please contact dealer or manufacturer.



DO

Do use headphones and systems at comfortable and safe listening levels.
Do gently clean equipment between uses and users. Hygienic wipes and ear pad covers are available from your supplier.
Do feel free to expand your system. Mix and match with a variety of Over-Ear transmitters, headphones and receivers.
Do call, email or visit us for help and advice.




DON'T

Don't use 2 or more transmitters on the same channel - they won't work.
Don't use equipment near other wireless apparatus including radio mics, transmitters etc. Frequencies can interfere and result in distorted or no signal.
Don't attempt to repair or modify equipment yourself. At best this invalidates your warranty. At worst this could seriously harm somebody.
Don't use headphones for extended periods of time.

NEED HELP?

Feel free to drop us a line at:
Support@over-ear.com

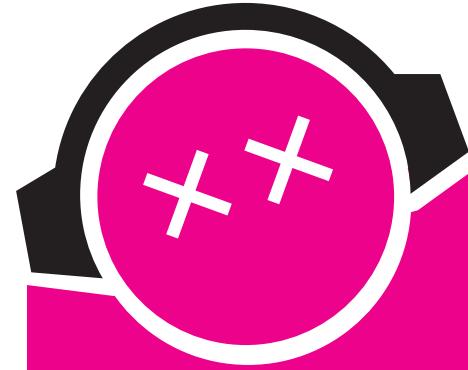

TROUBLE SHOOTING

NO AUDIO / MUSIC?

Check your music playing device is working, connected correctly, playing music with volume turn Parrot up full.

Try a different device and audio cable.

Ensure receivers/headphones are switched on, connected to correct channel and have volume up.

NB - if the mic works but no music, the problem is likely to be your own music device or connection.

NO MIC?

Check the mic is working and connected properly.

Ensure receivers/headphones are switched on, connected to correct channel and have volume up.

Try using mic without any music.

NB - if music works but no mic, the problem is likely to be the mic.

SIGNAL CUTS OUT, INTERFERENCE OR REDUCED RANGE?

Ensure there is no interference caused by other wireless equipment in the vicinity.

If using 2 or more transmitters (or Falcon X) simultaneously make sure each is on different channels (frequencies). You cannot use 2 transmitters on the same channel in the same place ever. They will cancel each other out, resulting in little or no signal.

NO POWER?

Check the transmitter is fully charged and switched on.