



How it works



Setting up your Ned Receiver

1



Step one
Set up the transmitters and start playing audio.

2



Step two
Plug headphones or speaker into the receiver.

3



Step three
Press and hold the power button to turn the receiver on. The LED light will glow to indicate it is on.

4



Step four
Change the channel by pressing the "CH" button will change colour to indicate the channel.

5



Step five
When required, plug the Ned into a power source via a mini-USB to charge the device.



Troubleshooting
Check out the back of this sheet for tips on solving problems that you may run into.



a

Aux 3.5mm jack input

Input for headphones or speakers.

b

Channel button

Changes the channel you're transmitting to.

c

Power button

Switches the receiver on and off.

d

Belt clip

Allows you to attach to your belt for portability.

e

Mini-USB input

Insert mini-USB to charge the device.

f

Volume button

Use "+" or "-" to adjust audio input volume.

Troubleshooting!

No Audio?

- Check your audio device is working, connected correctly, playing music with the volume turned up full.
- Ensure the receivers/headphones are switched on, synced to correct channel and have the volume turned up.
- Try a different device and audio cable.

No Power?

- Check that the batteries are inserted correctly and hold charge.

Signal cuts out, interference or reduced range?

- Set up one channel at a time, the colour of the LED on the receiver matches the channel on the transmitter.
- Ensure there is no interference caused by other wireless equipment in the vicinity.
- If using two or more transmitters simultaneously, make sure each is on different channels (frequencies). You cannot use two transmitters on the same channel in the same place as they will cancel each other out.
- Make sure the transmitter is in range of the headphones.



hello@silentdiscoking.com · silentdiscoking.com · @silentdiscoking

