



# How it works



## Setting up your Bob Headphones

1



### Step one

Set up transmitters and start playing audio.

2



### Step two

Switch the headphones on. Hold the power button until LED power light shows.


3



### Step three

Tapping the power button to change channel. The LED light will change according to the channel.

4

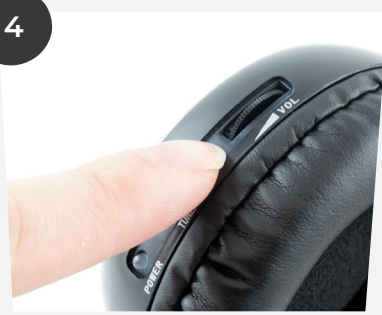

### Step four


Adjust the volume by scrolling the volume wheel.

5



### Step five

If needed, remove the right headphone cap and replace with 2 x AAA batteries.

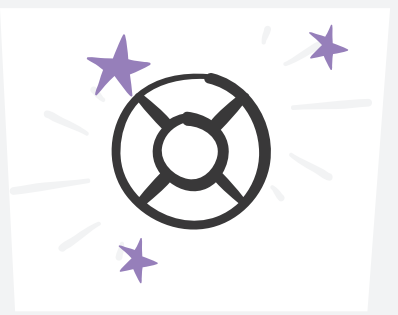

### Troubleshooting

Check out the back of this sheet for tips on solving problems that you may run into.



a

#### Folding hinge

Use to fold headphones when they are not in use.

b

#### Power / channel LED

Illuminates when the headphones are on and indicates channel.

c

#### Power channel button

Switches headphones on / off and selects channel.

d

#### Volume wheel

Scroll to adjust audio input volume.

e

#### Aux socket

Can be used to connect input or use as output.

f

#### Battery cover

Push the clip on to remove the cap and replace the batteries.

# Troubleshooting

## No Audio?

- Check your music playing device is working, connected correctly, playing music with volume turned up full.
- Try a different device and audio cable.
- Ensure receivers / headphones are switched on, connected to correct channel and have volume up.

## No Power?

- Check the transmitter is fully charged / plugged in correctly and switched on.

## Signal cuts out, interference or reduced range?

- Ensure there is no interference caused by other wireless equipment in the vicinity.
- If using 2 or more transmitters simultaneously make sure each is on different channels (frequencies). You cannot use 2 transmitters on the same channel in the same place. They will cancel each other out, resulting in little or no signal.
- Make sure the transmitter is in range.



hello@silentdiscoking.com • silentdiscoking.com • @silentdiscoking



Something not working? Visit [silentdiscoking.com/help](https://silentdiscoking.com/help) or call our 24/7 support line **0207 0603 653**