



How it works



Setting up your Falcon Transmitter



Step one
Fix the aerial provided onto the back of the transmitter.



Step two
Plug your power cable into the transmitter. It can also run on battery power (if required).



Step three
Connect to an audio source into the aux socket using the cables provided.



Step four
Switch the transmitter on by sliding the button to Hi.



Step five
Assign a channel to the transmitter.



Troubleshooting
Check out the back of this sheet for tips on solving problems that you may run into.



a

Audio input

Direct input for microphone.
Only use SDK supplied microphones.

b

RCA audio input

Direct input for microphones.

c

Power light

Indicates when transmitter is on/off.

d

USB input

USB for SDK use only,
DO NOT try to connect.

e

Channel selector

Indicates what channel you're transmitting to.
1. Red / 2. Green / 3. Blue

f

DC input

Input for power adaptor to charge.

Troubleshooting

No Audio?

- Check your music playing device is working, connected correctly, playing music with volume turned up full.
- Try a different device and audio cable.
- Ensure receivers / headphones are switched on, connected to correct channel and have volume up.

No Power?

- Check the transmitter is fully charged / plugged in correctly and switched on.

Signal cuts out, interference or reduced range?

- Ensure there is no interference caused by other wireless equipment in the vicinity.
- If using 2 or more transmitters simultaneously make sure each is on different channels (frequencies). You cannot use 2 transmitters on the same channel in the same place. They will cancel each other out, resulting in little or no signal.
- Make sure the transmitter is in range.



hello@silentdiscoking.com · silentdiscoking.com · @silentdiscoking



Something not working? Visit silentdiscoking.com/help or call our 24/7 support line 0207 0603 653