



How it works



Setting up your Harry Headphones

1



Step one

Set up transmitters and start playing audio.


2



Step two

Switch the headphones on. Hold the power button until LED power light shows.

3

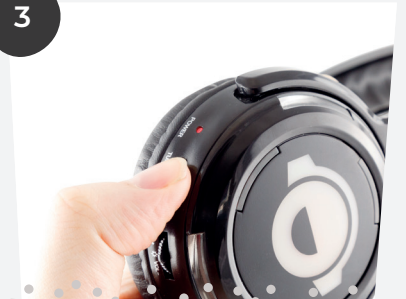

Step three

Tapping the power button to change channel. The LED light will change according to the channel.

4



Step four

Adjust the volume by scrolling the volume wheel.

5



Step five

If needed, plug Harry into USB socket to charge for up-to 3 hours.



Troubleshooting

Check out the back of this sheet for tips on solving problems that you may run into.



a

Adjustable headband

Pull to adjust headphone band for comfort when wearing.

b

USB charge port

Charge using mini-USB.

c

Power light

Illuminates when the headphones are on.

d

Power / channel button

Switches headphones on / off and selects channel.

e

Volume wheel

Use + or - to adjust audio input volume.

f

Aux socket

Can be used to connect input or use as output.

Troubleshooting

No Audio?

- Check your music playing device is working, connected correctly, playing music with volume turned up full.
- Try a different device and audio cable.
- Ensure receivers / headphones are switched on, connected to correct channel and have volume up.

No Power?

- Check the transmitter is fully charged / plugged in correctly and switched on.

Signal cuts out, interference or reduced range?

- Ensure there is no interference caused by other wireless equipment in the vicinity.
- If using 2 or more transmitters simultaneously make sure each is on different channels (frequencies). You cannot use 2 transmitters on the same channel in the same place. They will cancel each other out, resulting in little or no signal.
- Make sure the transmitter is in range.



hello@silentdiscoking.com • silentdiscoking.com • @silentdiscoking



Something not working? Visit silentdiscoking.com/help or call our 24/7 support line 0207 0603 653