



How it works



Setting up your Parakeet Transmitter

1



Step one

Press and hold the On button to turn the transmitter on.

2



Step two

Connect to an audio source using the cables provided.

3



Step three

Connect a microphone. Only use SDK supplied microphones.

4



Step four

Hold channel button to assign a channel to the transmitter. The LED will display the colour of the channel you're transmitting to.

5



Step five

Turn your headphones by pressing and holding down the on button.



Troubleshooting

Check out the back of this sheet for tips on solving problems that you may run into.



a

Power Button

Switches transmitter on and off.

b

Channel Indicator

LED illuminates to indicate the channel. Corresponds to colour on headphones.

c

Mic Input

Direct input for microphones. Only use SDK supplied microphones.

d

Audio input

Connect to audio device using cable provided.

e

Channel selector

Indicates what channel you're transmitting to.
1. Red / 2. Green / 3. Blue

f

DC input

Input for mini-USB power adaptor to charge.

Troubleshooting

No Audio?

- Check your music playing device is working, connected correctly, playing music with volume turned up full.
- Try a different device and audio cable.
- Ensure receivers / headphones are switched on, connected to correct channel and have volume up.

No Power?

- Check the transmitter is fully charged and switched on.

Signal cuts out, interference or reduced range?

- Ensure there is no interference caused by other wireless equipment in the vicinity.
- If using 2 or more transmitters simultaneously make sure each is on different channels (frequencies). You cannot use 2 transmitters on the same channel in the same place. They will cancel each other out, resulting in little or no signal.
- Make sure the transmitter is in range.



hello@silentdiscoking.com · silentdiscoking.com · @silentdiscoking



Something not working? Visit silentdiscoking.com/help or call our 24/7 support line 0207 0603 653