



Bob

Professional Wireless
Headphones

WWW.OVER-EAR.COM

What's in the box

Headphones & batteries



2x AAA Batteries

Make the most of your Bob...

Bob is compatible with a wide range of OVER-EAR products including transmitters and different receivers. Mix the products you need to create your perfect system.

Compatible with:



Harry



Joe



Ned



Falcon



Donkey



Parakeet

OVER-EAR

WWW.OVER-EAR.COM

Bob setup...



1

INSERT BATTERIES
Remove the cover on the left headphone and replace with AAA batteries.




2

START AUDIO
Set up transmitter with music playing (see separate product instructions).



3

SWITCH ON
press and hold the tune/ on/ off button to turn headphone on, LED light will illuminate.

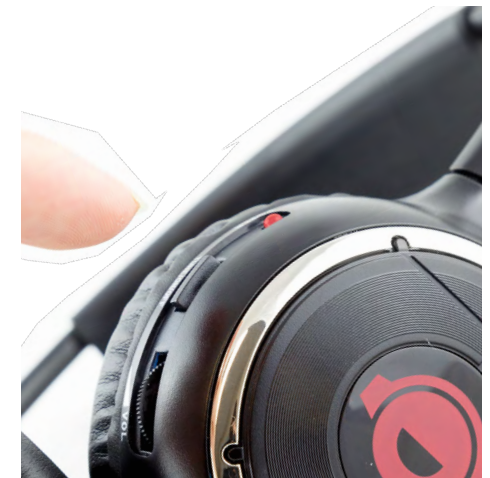

4

CHANGE CHANNELS
Press tune/on/off button to select channel.

MEET BOB



1. LED channel indicator

IN USE

Red LED illuminates when headphone is on.

2. Power/ tune button

Press and hold for on/off (2 sec).

Quick tap to change channels.

3. Volume

Use + or - to adjust audio input volume.

4. 3.5mm jack socket

Input - can be used to connect to audio device using standard 3.5mm cable.

Output - can be used to share received audio with another audio device (i.e. headphones), by connecting to socket.

5. Folding hinge

Use to fold headphones when they are not in use.

HOW TO FOLD

The folding hinges are marked on the image to the right.

Fold headphone cup in towards the band.

Fold back out when you want to use.



TECHNICAL SPECIFICATION

Model Number	OE300F	
Dimensions:	19cm (20.5cm extended)	
Weight:	260g	
Sound:	Stereo	
Frequency Response	20-15,000Hz	
Channel Separation:	>40dB	
System:	UHF/ RF	
Modulation:	FM	
S/N ratio:	>75db	
Connections:	3.5mm Jack	
Power Source:	2x AAA Battery	
Battery Life:	Up to 20 hours	
Noise Reduction:	Yes	
Speaker:	40mm Mylar	
Impedance:	32 ohm	
Power Saving:	After 10 minutes of no detected signal	
Operational Distance:	300m	
Frequencies:	Custom i.e. 433MHz/ 863MHz/ 915MHz etc	

LED Colour Typical Frequency

	EU	USA	AUS
Red	863.1MHz	914MHz	433.1MHz
Green	863.7MHz	915MHz	433.7MHz
Blue	864.9MHz	916MHz	434.9MHz
Yellow	864.3MHz	917MHz	N/A

Please note frequencies and other specifications may be changed without notice.

If in doubt please confirm with supplier.

SAFETY INSTRUCTIONS

- Switch off and disconnect equipment from mains before cleaning.
- Do not repair or replace parts for any products.
- Do not use equipment if damaged by water, heat, physical impact etc.
- Do not use or store equipment in or near water, moist or hot environments.
- Keep away from radiators and heat generating electrical equipment such as screens and amps.
- Use only the supplied accessories with your product.
- Do not leave batteries in the headphones for long periods of time. This can cause the batteries to corrode.
- Ensure that power connection is plugged in properly - not damaged, working within a comfortable temperature & not exposed to direct sunlight.
- Do not overload wall sockets.
- Failure to comply with safety guidelines can result in electrical shock, fire, damage to equipment and invalidate your warranty.
- If in doubt please contact dealer or manufacturer.



DO

Do use headphones and systems at comfortable and safe listening levels.

Do gently clean equipment between uses and users. Hygienic wipes and ear pad covers are available from your supplier.

Do feel free to expand your system. Mix and match with a variety of OVER-EAR transmitters, headphones and receivers.

Do call, email or visit us for help and advice.




DON'T

Don't use 2 or more transmitters on the same channel - they won't work.

Don't use equipment near other wireless apparatus including radio mics, transmitters etc. Frequencies can interfere and result in distorted or no signal.

Don't attempt to repair or modify equipment yourself. This could seriously harm somebody.

Don't use headphones for extended periods of time.

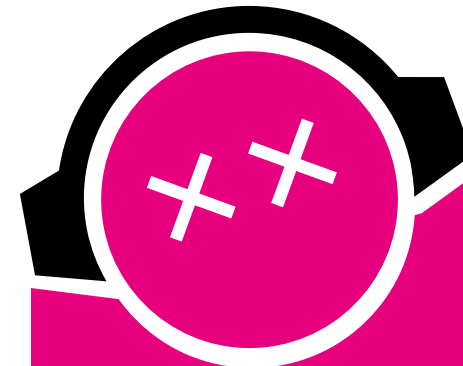

TROUBLE SHOOTING

NO AUDIO / MUSIC?

Check your music playing device is working, connected correctly, playing music with volume turned up full.

Try a different device and audio cable.

Ensure receivers/ headphones are switched on, connected to correct channel and have volume up.

The headphones turn themselves off after not receiving audio for 10 minutes, so if this happens check the transmitter is still broadcasting.

SIGNAL CUTS OUT, INTERFERENCE OR REDUCED RANGE?

Ensure there is no interference caused by other wireless equipment in the vicinity.

If using 2 or more transmitters simultaneously make sure each is on different channels (frequencies). You cannot use 2 transmitters on the same channel in the same place ever. They will cancel each other out, resulting in little or no signal.

NO POWER?

Check the headphones are switched on. Try replacing the batteries.



NEED HELP?

Feel free to drop us a line at:
Support@over-ear.com