



How it works



Setting up your Tom headphones

1



Set up transmitters as per instructions and start playing audio.

2




Switch the headphones on. Hold the power button for 2 secs until the LED power light shows.

3



Tap the power button to change channel (if more than one transmitter is connected). The light will change accordingly.

4

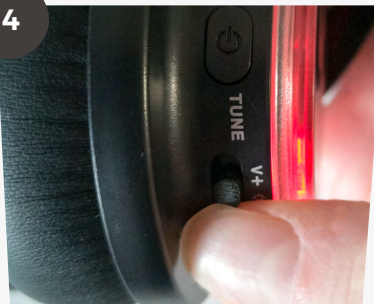

Adjust the volume by flicking the volume control.

5




Push-in and hold the volume control to toggle the light settings between static, flashing and off.



Troubleshooting

Check out the back of this sheet for tips on solving problems that you may run into.

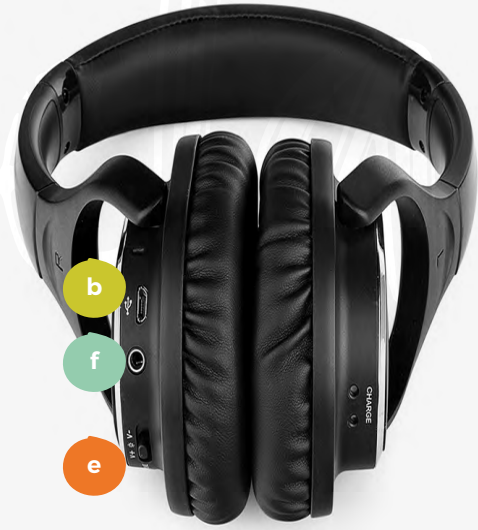

a

Adjustable headband

Pull to adjust the headphone band for comfort when wearing.

b

USB charge port

Charge using USB-C.

c

Power light

Illuminates when the headphones are on.

d

Power/channel button

Switches headphones on/off when held down. Selects the channel when tapped quickly.

e

Volume wheel and lights

Use + or - to adjust the audio volume. Press in and hold for 3 seconds to turn the lights off.

f

Aux socket

Can act as audio input when headphone is off or use as output when headphones on.

Troubleshooting!

No Audio?

- Check your music playing device is working, connected correctly, playing music with volume turned up full.
- Try a different device and audio cable.
- Ensure receivers / headphones are switched on, connected to correct channel and have volume up.

No Power?

- Check the transmitter is fully charged and switched on.

Signal cuts out, interference or reduced range?

- Ensure there is no interference caused by other wireless equipment in the vicinity.
- If using 2 or more transmitters simultaneously make sure each is on different channels (frequencies). You cannot use 2 transmitters on the same channel in the same place. They will cancel each other out, resulting in little or no signal.
- Make sure the transmitter is in range of the headphones.

